

SERVICE

SERVICE KIT NUMBER SK-105

DATE:

May 28, 1969

SUBJECT:

Engine Cooling System Modifications

MODELS AFFECTED:

AA1-0001 through AA1-0108, AA1-0110 through AA1-0115

WEIGHT & BALANCE CHANGE: Negligible

Parts List - Service Kit Number SK-105-1 (AA1-0074 through AA1-0115)

Quantity	Part Number	Description \
1	500008-502	Baffle Assy
1	500008-502	Baffle Assy
1	502028-501	Baffle Assy
1	502029-501	Baffle Assy
1	502030-1	Baffle
1	102370-1	Cuff
1	102370-2	Cuff
16	1601-0410	Rivet
1	AN500-416-6	Screw
1	AN936A-416	Washer
13	A1181-6Z-1	Nut
13	AES-1021Z6-6	Screw
1	16-500008	Field Modification Instructions

Parts List - Service Kit Number SK-105-2 (AA1-0001 through AA1-0073)
NOTE: This Kit includes all parts listed in SK-105-1 plus the following.

1 502006-501 Baffle Assy 1 502007-501 Baffle Assy

Description of Modification

- 1. Removal of both front and both rear baffle assemblies (AA1-0074 through AA1-0115). Removal of both front, both rear, and both side baffles (AA1-0001 through AA1-0073).
- Installation of replacement baffles. Addition on one new baffle and firewall cuffs.

Modification Instructions - Removal

- 1. Remove upper and lower engine cowling.
- Disconnect the four upper spark plug lead wires and pull through rear baffles after first removing grommets.

Cleveland, Ohio ed Cleveland, Ohio estr

- 3. Loosen clamp holding blast tube and remove blast tube from rear baffle.
- 4. Remove cotter pins from straps holding rear baffles against rear cylinders, and completely remove strap assemblies.
- 5. Detach both rear baffles from engine by removing nine (9) sheet metal screws and nuts. Do not remove center support which holds left-hand baffle in position.
- 6. Loosen upper and lower breather flex tube clamps, and remove flex tube.
- 7. Detach both front baffles from engine by loosening clamp holding cabin heat flex hose and removing four (4) sheet metal screws and nuts, one (1) 1/4-20 screw, and one (1) 5/16-18 starter attach bolt (located under left-hand front baffle).
- 8. NOTE: This step applies to Serial AA1-0001 through AA1-0073 only. Remove the eight (8) 1/4-20 screws holding side baffles to cylinders and detach side baffles from engine.

Modification Instructions - Installation (Ref. Drawing 500008)

- 1. Install new inner cylinder baffle (Part No. 502030-1) between No. 2 and No. 4 cylinders and secure to No. 2 cylinder by installing AN500-416-6 screw and AN936A-416 washer in upper hole. For ease of installation, remove paint from screw hole before installing.
 - NOTE: Aircraft Serials 0074 through 0115 will require removal of one side baffle screw from No. 4 cylinder before inner cylinder baffle can be installed. Reinstall screw after assembly.
- 2. NOTE: This step applies to Serial AA1-0001 through AA1-0073 only. Install both side baffles supplied in SK-105-2 locating longer baffle assembly on left-hand side and secure by installing eight (8) 1/4-20 screws and washers.
- 3. Position both new rear baffles and secure nine (9) places using the AES-1021Z6-6 screws and Al181-62-1 nuts supplied with the Service Kit.
- 4. Position rear baffle holding straps through slots in baffle and secure with cotter pin. Check to make sure that chafe strip is located between push rod tube and strap.
- 5. Reinstall blast tube through left-hand rear baffle. Position blast tube so that cooling air is directed at the junction of the thermister and oil screen housing, and tighten clamp located at oil temperature thermister.
- 6. Feed spark plug leads through grommets and assemble to their respective plugs. Install plug wire grommets in baffles.
- 7. Install both front baffles and secure using four (4) AES-1021Z6-6 screws and four (4) Al181-62-1 nuts supplied in the Service Kit. Also reinstall one (1) 1/4-20 screw (with washers) and one (1) 5/16-18 starter attach bolt (located under left-hand front baffle).

SERVICE WIT MESSAGE VIOLE

- 8. Feed crankcase breather tube through left-hand front baffle, assemble to fittings, and tighten clamps.
- 9. Install cabin heat flex hose to tube on right hand baffle assembly and secure with clamps.
- 10. Locate two cuffs (Part No. 102370-1 and 102370-2) on lower firewall edge per Drawing 500008 and match drill 16 No. 29 holes \times 1/4 deep through pilot holes in cuffs into firewall and floor panels.

NOTE: Do not drill through inside surface of honeycomb firewall and floor panels.

Rivet the cuffs in place using sixteen (16) 1601-0410 rivets supplied with the Service Kit. These rivets can be set with a "pop" rivet tool (United Shoe Machinery No. PRG410 or equivalent).

- 11. Check all baffle assemblies for close fit around cylinders and that front seals clear ring gear.
- 12. Install cowlings making sure all baffle seals are forced inward after upper cowling is installed.

AMERICAN AVIATION CORPORATION

JCP:jw